

• Jacksonville, Florida 32211 800-334-0151

Rear Lowering kit -

Jack the car up by the frame (not the rear axle). Jack up one side or both sides at once, whichever is easier with the jack you are using.

Iut jack stands under the car.

Remove the rear whell from one side.

Remove the 4 nuts that hold the 2 U bolts to the spring plate. This plate is under the spring.

now lift the rear axle and push it forward. This can be done by hand or with a jack on the axle.

Remove the 2 rubber pieces that sandwich the spring.

Stack one of the aluminum blocks provided above the leaf spring

Lift the axle back into place over the aluminum block and replace the lower spring plate without the rubber bushings.

Retighten the U Bolts after they have been driven.

